

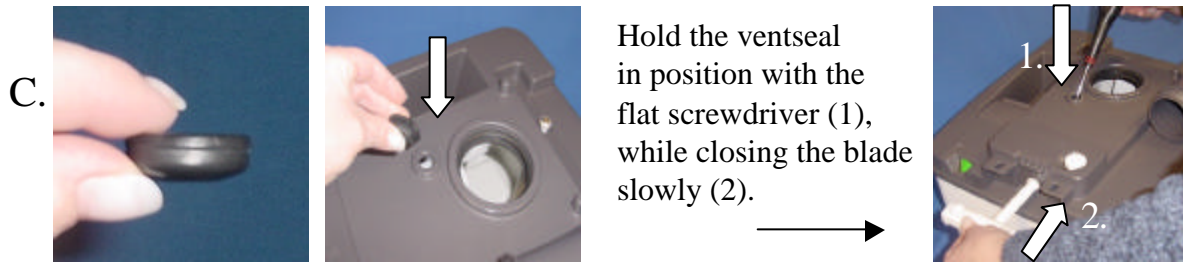
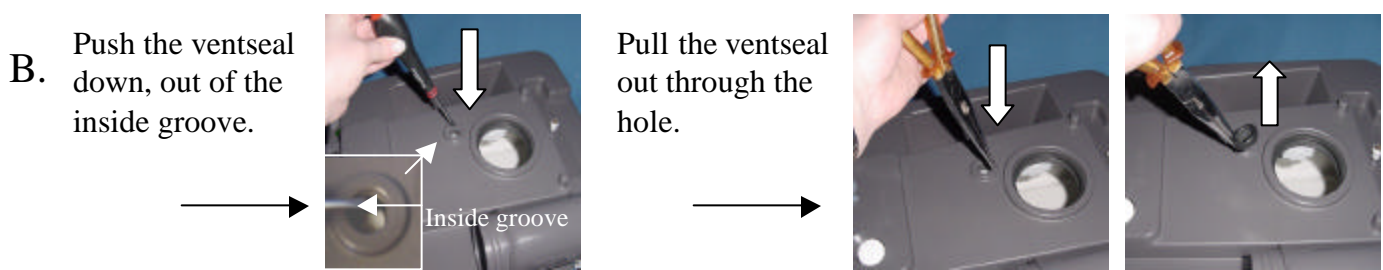
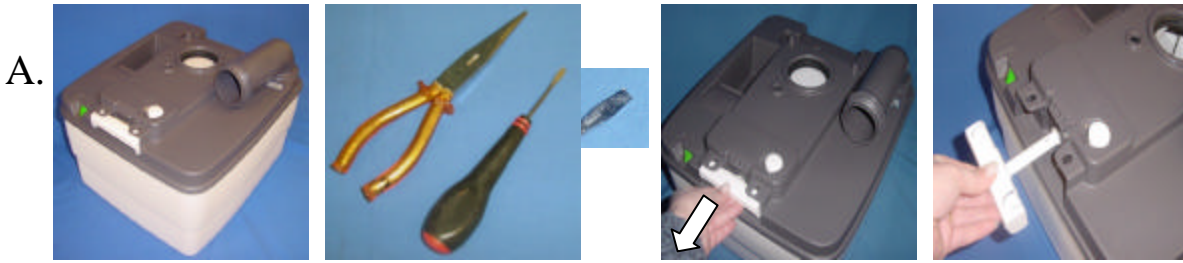


## 1. 07069 Ventseal

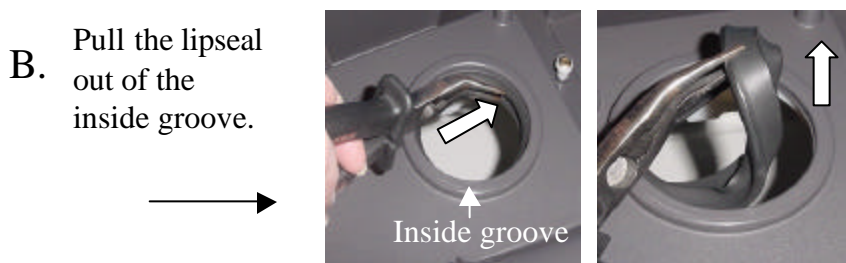

## 2. 07143 Lipseal

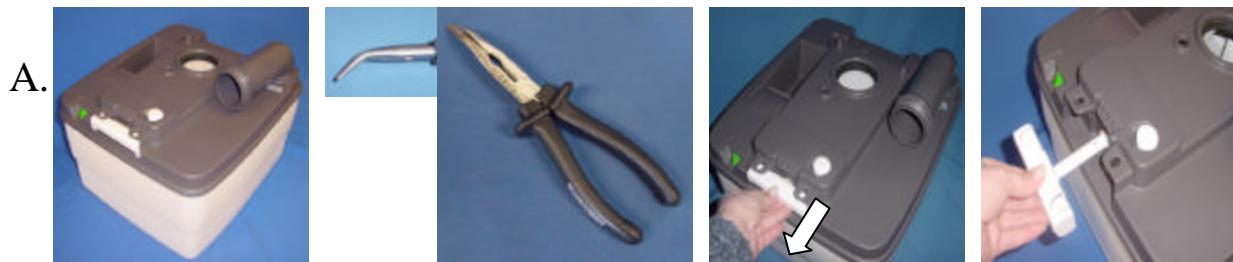

### 3. 29314-62 Vent button



- 1. Seal retainer
- 2. Spring
- 3. Vent button



B. Go with your hand in the waste tank and press the vent button (3).



While pressing the vent button, pull the seal retainer loose (1).



C. Bring new seal retainer (1) and spring (2) in position and click the vent button (3) into the seal retainer

